


Assembly Instructions

MODEL NO.:N147



Bullet Desk

TUN010CL	TUN010KL	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG		
A  Cam lock 9Pcs+1Pcs(spare)	B  Klix Cam 9Pcs+1Pcs(spare)	C  Cam Cover 9Pcs+1Pcs(spare)	D  Dowel 5Pcs+1Pcs(spare)	E  Adjustable Glide 4 PCS	F  6Hole L-Bracket 4Pcs	G  screw#4 1/2" 24Pcs+1Pcs(spare)	H  screw#5 1/8" 4Pcs+1Pcs(spare)	I  80mm Black Grommet 1 Pcs

STEP1

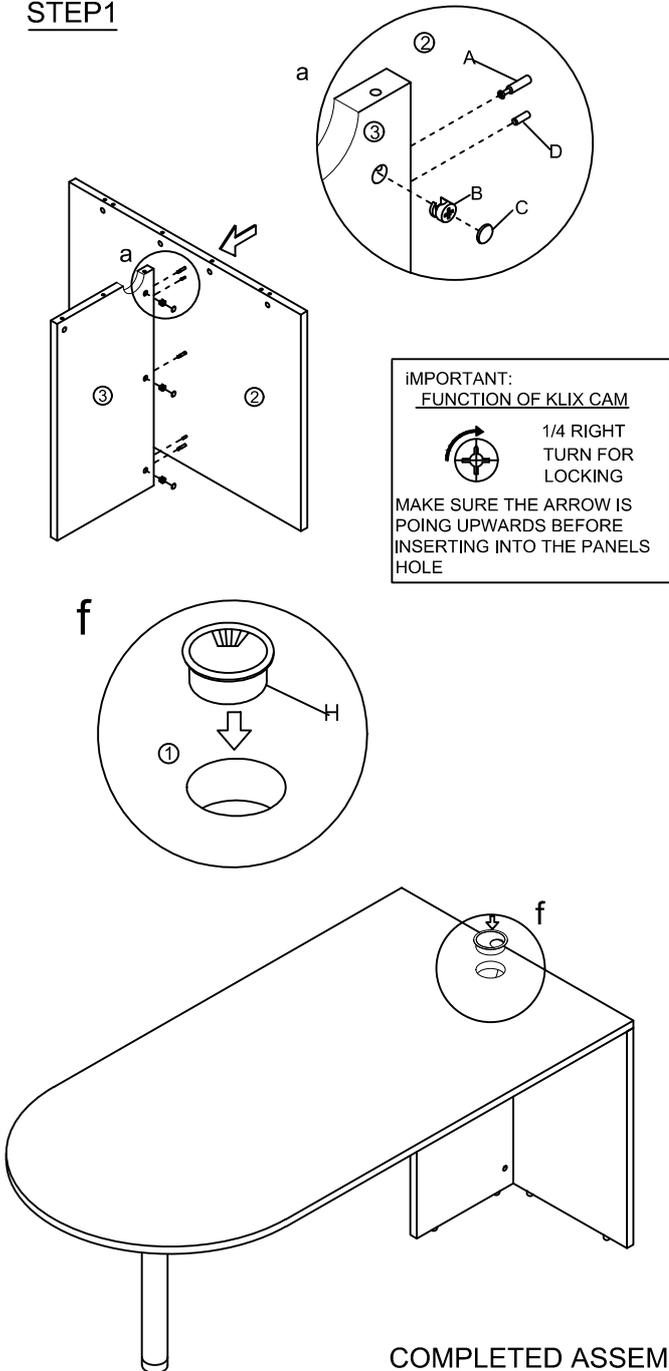

STEP2

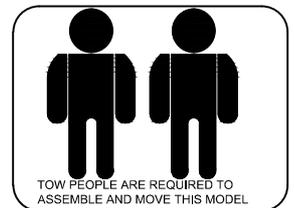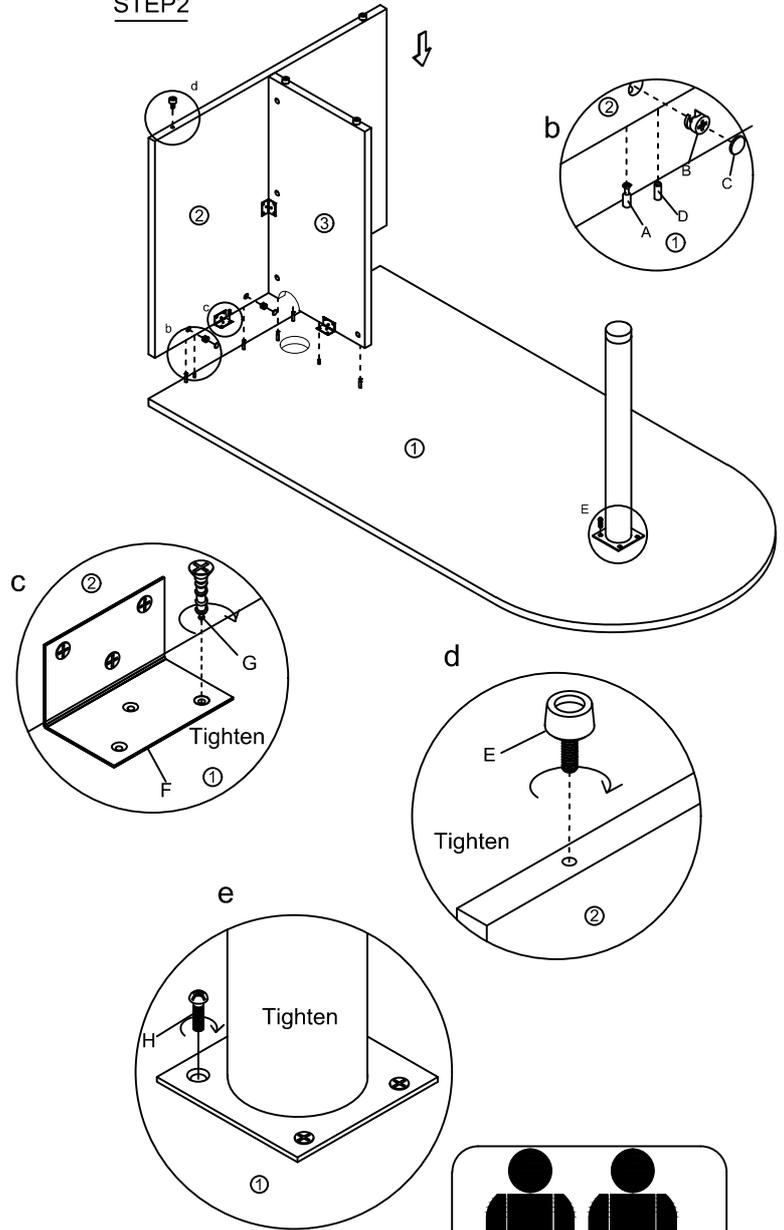

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bossschair.com