


Assembly Instructions

MODEL NO.:N180

GALLERY RETURN

TUN010CL	TUN010KL	C	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN019IB	I	TUN015BG
A 	B 		D 	E 	F 	G 	H 		L 
Cam lock 10Pcs+1Pc(spare)	Klix Cam 10Pcs+1Pc(spare)	Cam Cover 24Pcs+1Pc(spare)	Dowel 6Pcs+1Pc(spare)	Adjustable Glide 4 Pcs	6Hole L-Bracket 3Pcs	screw#4"x5/8" 18Pcs+1Pc(spare)	I-Bracket 3Pcs	screw 12Pcs	80mm Black Grommet 1 Pcs

STEP1

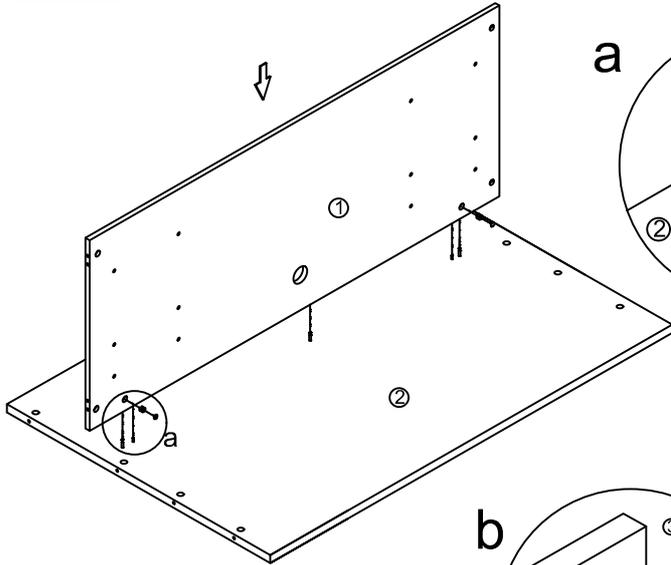


**IMPORTANT:
FUNCTION OF KLIX CAM**




1/4 RIGHT
TURN FOR
LOCKING




MAKE SURE THE ARROW IS
POINTING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE

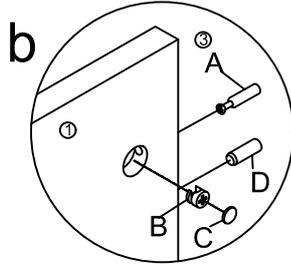





STEP2

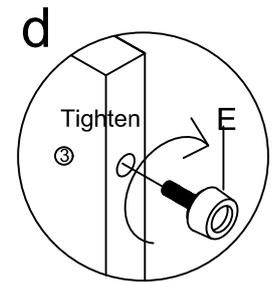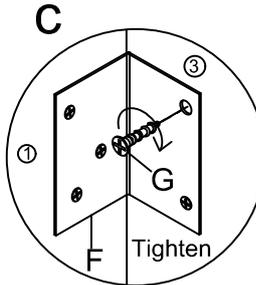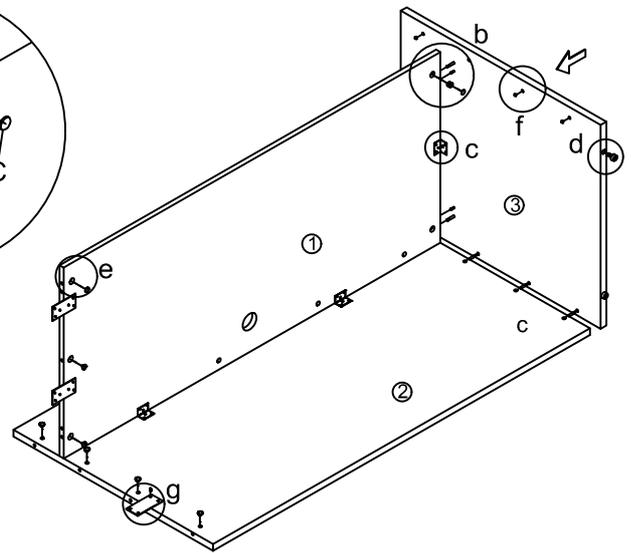

STEP3

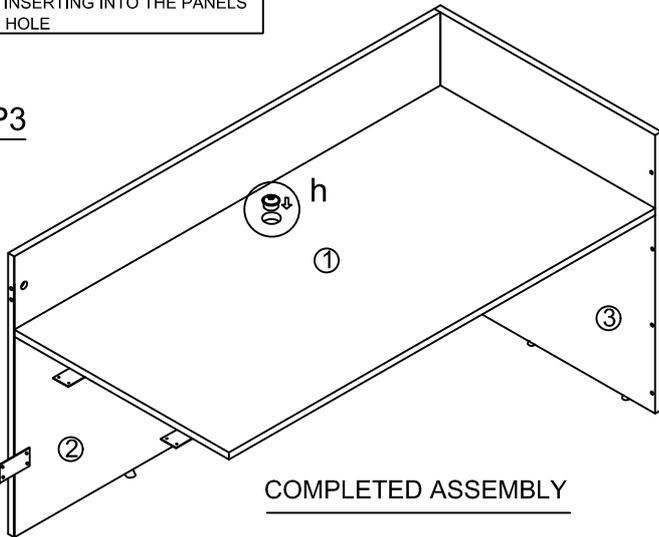

COMPLETED ASSEMBLY

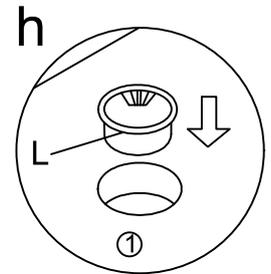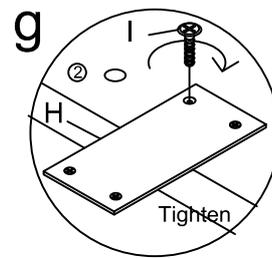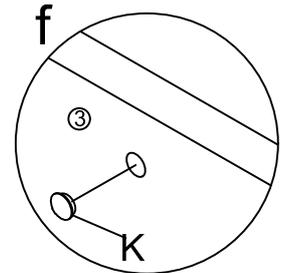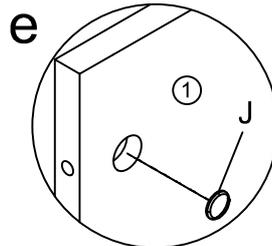

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bossschair.com