 
 



# Assembly Instructions

## MODEL NO.N102

### DESK SHELL

TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	
<b>A</b>  Cam lock 14Pcs+1Pc(spare)	<b>B</b>  Klix Cam 14Pcs+1Pc(spare)	<b>C</b>  Cam Cover 19Pcs+1Pc(spare)	<b>D</b>  Dowel 9Pcs+1Pc(spare)	<b>E</b>  Adjustable Glide 4Pcs	<b>F</b>  6Hole L-Bracket 5Pcs	<b>G</b>  Screw#4*5/8" 30Pcs+1Pc(spare)	<b>H</b>  80mm Black Grommet 2 Pcs

#### STEP1

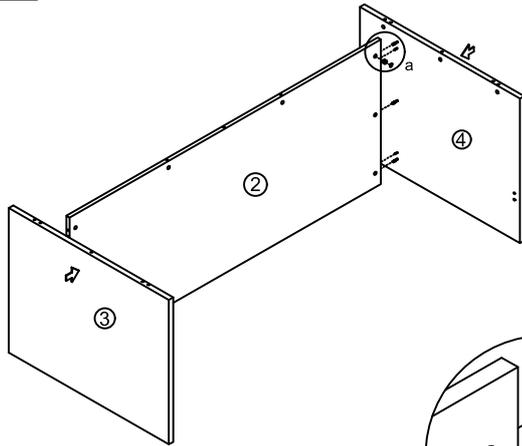


**IMPORTANT:  
FUNCTION OF KLIX CAM**




1/4 RIGHT  
TURN FOR  
LOCKING  
Make Sure The Arrow Is  
Pointing Upwards Before  
Inserting Into The Panel's Hole





#### STEP2

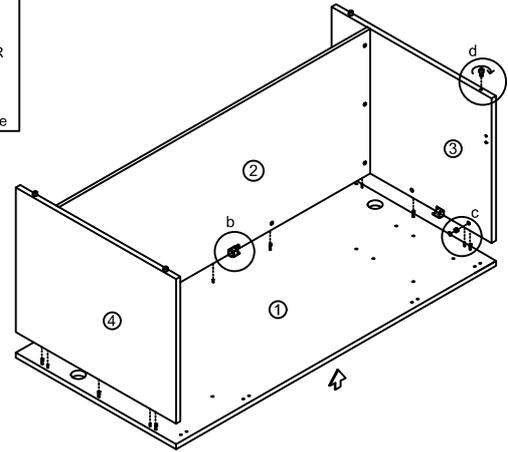

#### STEP3

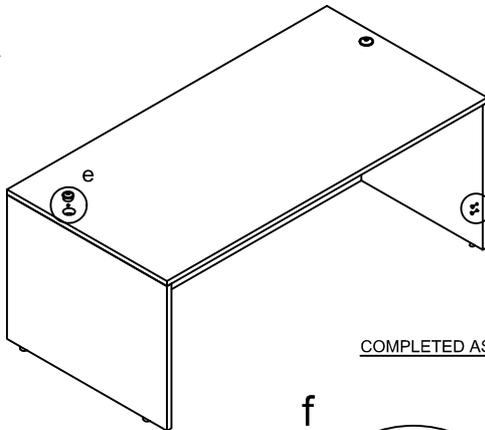

COMPLETED ASSEMBLY

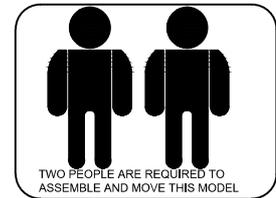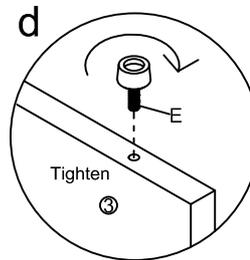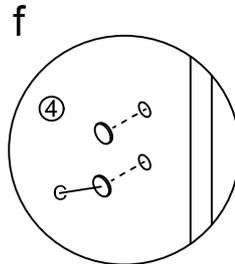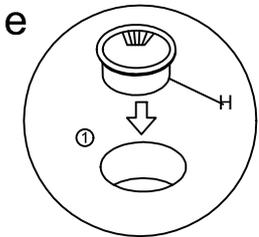

#### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at [www.bossschair.com](http://www.bossschair.com)