 
 



Assembly Instructions

MODEL NO.:N104/N106








Desk shell

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN018SC	TUN013LB	TUN017BG/SG
 Cam lock 12pcs+1pc(spare)	 Klix Cam 12pcs+1pc(spare)	 Cam Cover 17pcs+1pc(spare)	 Dowel 10Pcs+1Pc(spare)	 Adjustable Glide 4 PCS	 screw#4**5/8" 30Pcs+1Pc(spare)	 6Hole L-Bracket 5Pcs	 80mm Grommet 2 PCS


STEP1

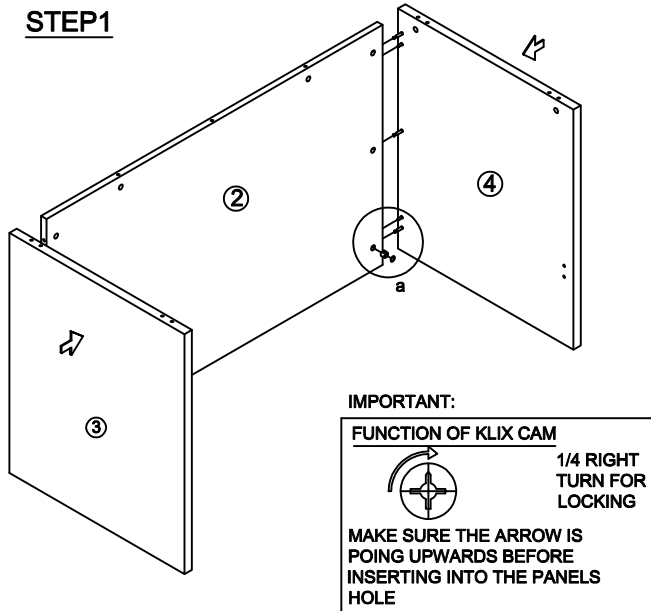

STEP2

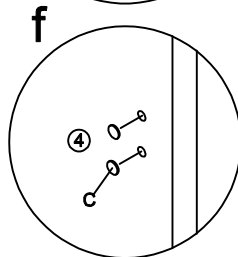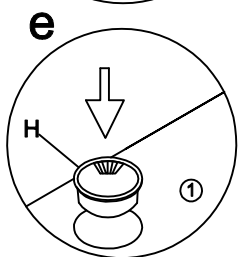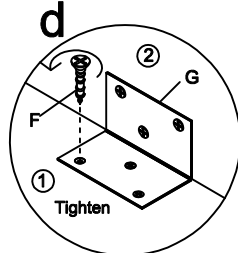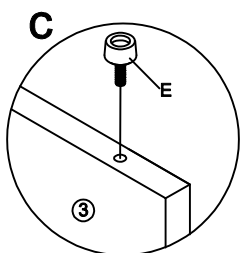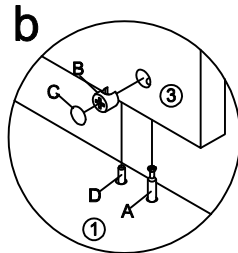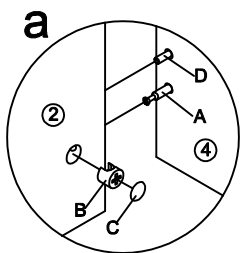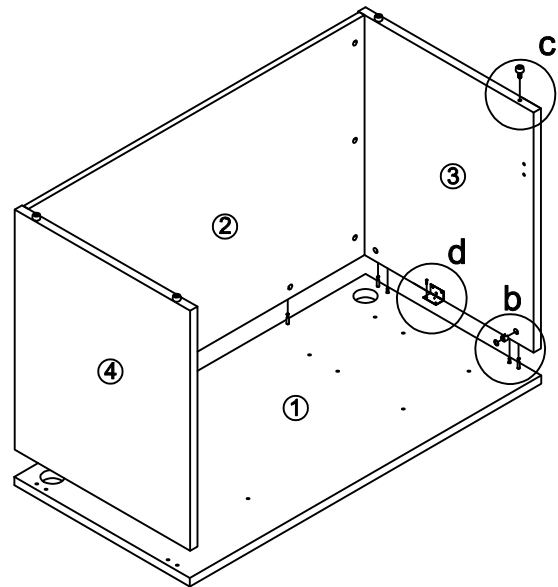

STEP3

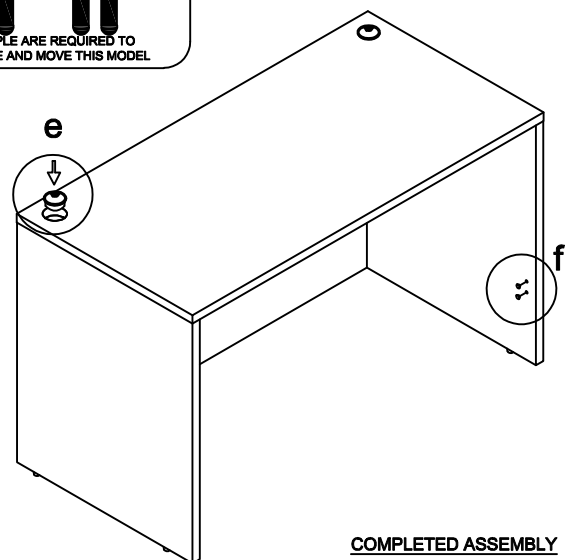

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.boschair.com