 
 
 
 




Assembly Instructions

MODEL NO.:N145/N191/N192/196


Return-Reversible

TUN010CL	TUN010KL		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN019IB		TUN017BG/SG
A  Cam lock 7Pcs+1Pc(spare)	B  Klix Cam 7Pcs+1Pc(spare)	C  Cam Cover 17Pcs+1Pc(spare)	D  Dowel 3Pcs+1Pc(spare)	E  Adjustable Glide 4 PCS	F  6Hole L-Bracket 3Pcs	G  screw#4"5/8" 18Pcs+1Pc(spare)	H  I-Bracket 3Pcs	I  screw 12+1PCS	L  80mm Grommet 2 Pcs

  
STEP1

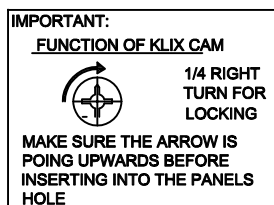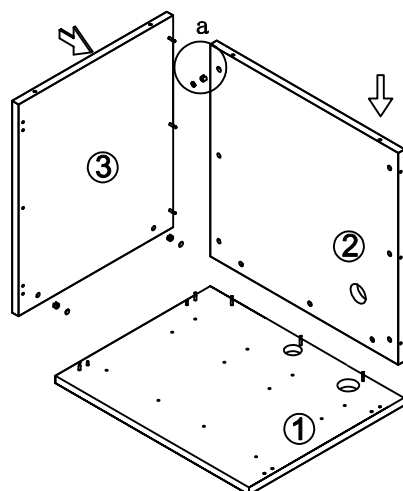






 
STEP2

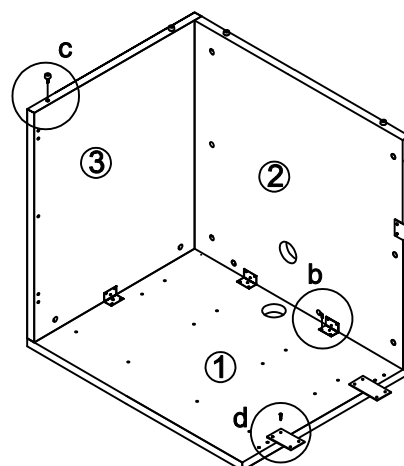

 STEP3

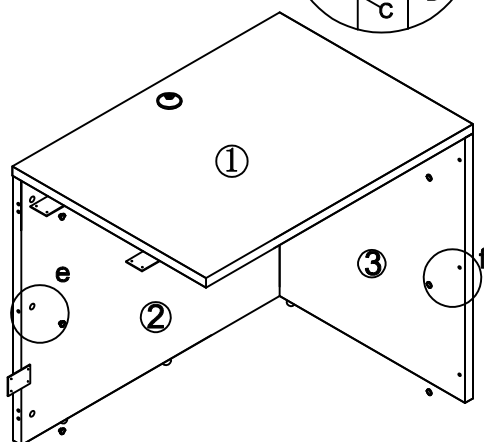

COMPLETED ASSEMBLY

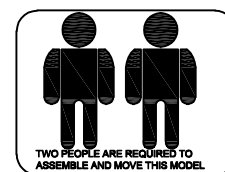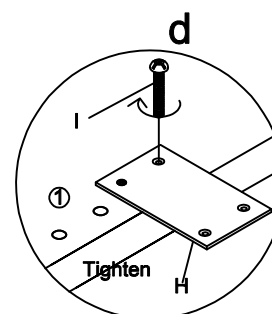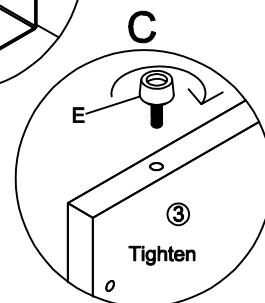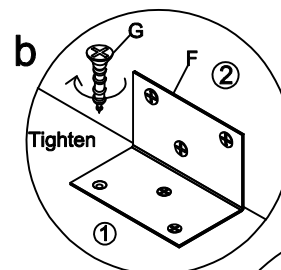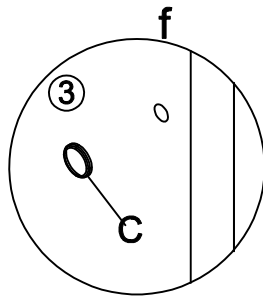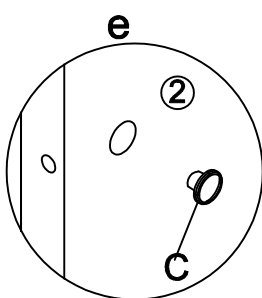      

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.boschair.com