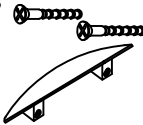
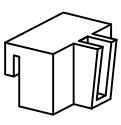
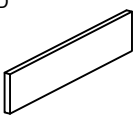
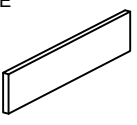
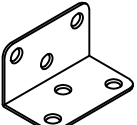



ASSEMBLY INSTRUCTIONS

MODEL NO. N112



2 DRAWER LATERAL FILE

TUN021AG	TUN006MH	TUN001FC	TUN003AB	TUN004AB	TUN013LB6	TUN014SC	
A  Adjustable Glide 4 PCS	B  96mm Metal Scallop shape Handle 2 Sets	C  File clip 8+1Pcs	D  675*16*3mm Aluminum Bar 2Pcs	E  377*16*3mm Aluminum Bar 4Pcs	F  6 Hole L-Bracket 4+1 PCS	G  Screw #4**5/8" 30 PCS+1Pc(spare)	 Keys 1set

STEP1

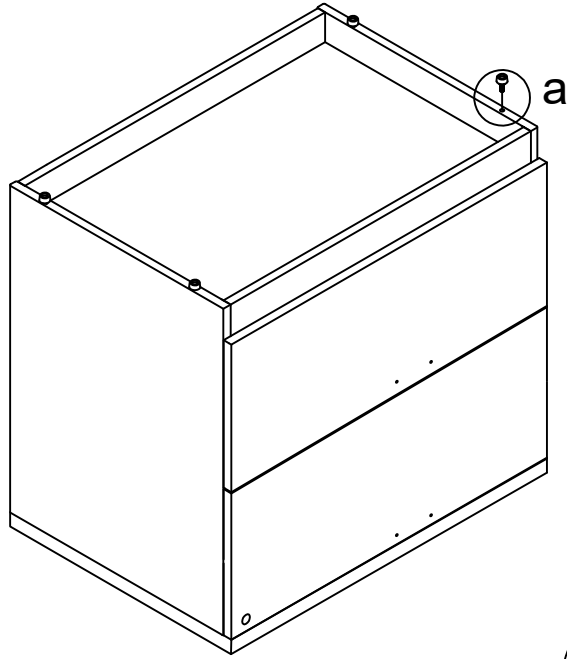

STEP2

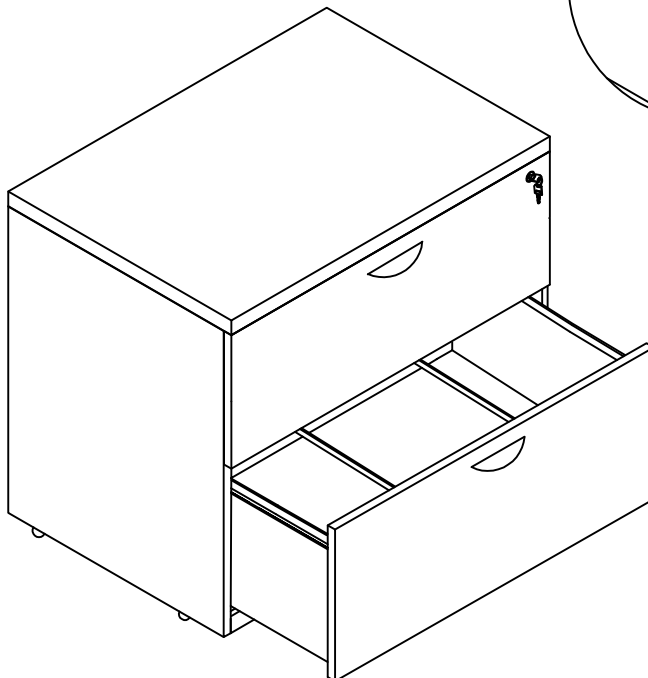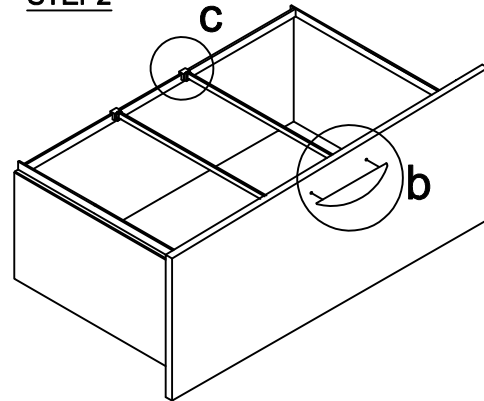

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until completely assembled.
- Keep hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bossschair.com


REMOVE THE TOP PANEL INSTRUCTIONS

MODEL NO. N112

2 DRAWER LATERAL FILE


Remarks: Do not remove the top panel unless necessary.

STEP3

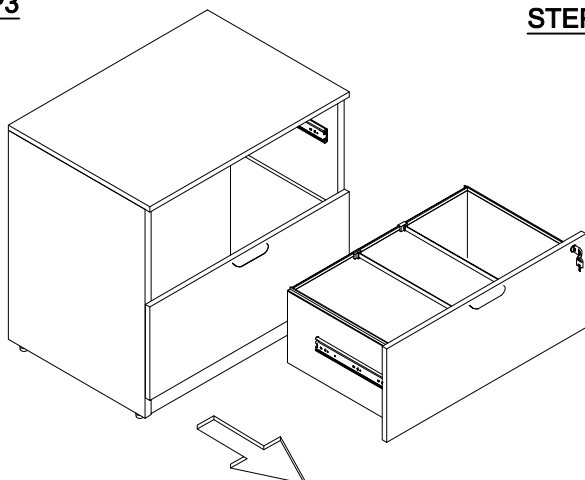

STEP4

Loosen all the cam locks at the 4 corners, then top can be taken off.

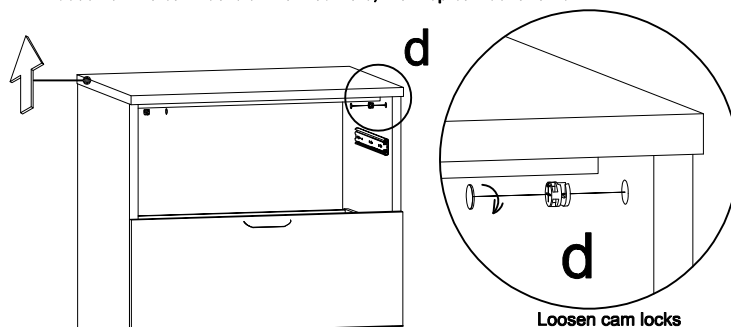

STEP5

