



Assembly Instructions

MODEL NO.:N170/N171/N193/N197

BRIDGE

TUN010CL	TUN010KL	C	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN019IB	I	TUN017BG/SG
									
Cam lock 4Pcs+1Pc(spare)	Klix Cam 4Pcs+1Pc(spare)	Cam Cover 4Pcs+1Pc(spare)	Dowel 4Pcs+1Pc(spare)	Adjustable Glide 2 PCS	6Hole L-Bracket 2Pcs	screw#1 $\frac{1}{8}$ " 12Pcs+1Pc(spare)	I-Bracket 6Pcs	screw 24Pcs+1Pc(spare)	80mm Grammet 2 Pcs

STEP1





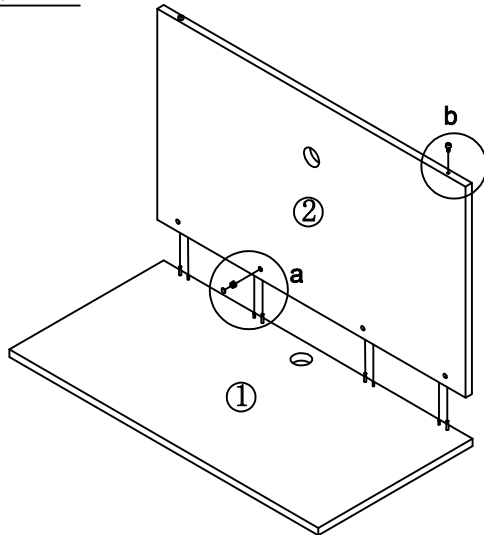


IMPORTANT:




FUNCTION OF KLIX CAM

 1/4 RIGHT
 TURN FOR
 LOCKING
 MAKE SURE THE ARROW IS
 POING UPWARDS BEFORE
 INSERTING INTO THE PANELS
 HOLE

STEP2

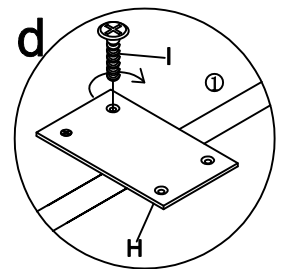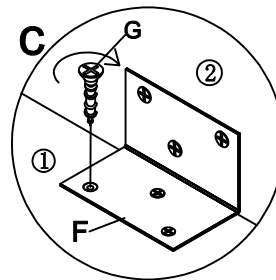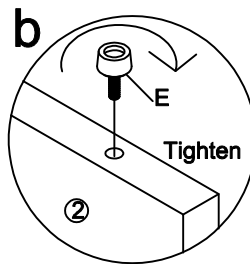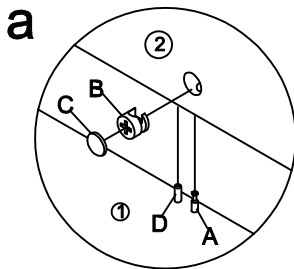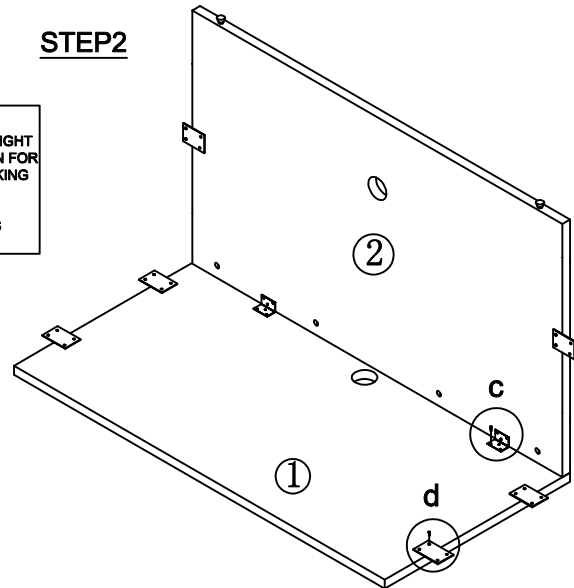

STEP3

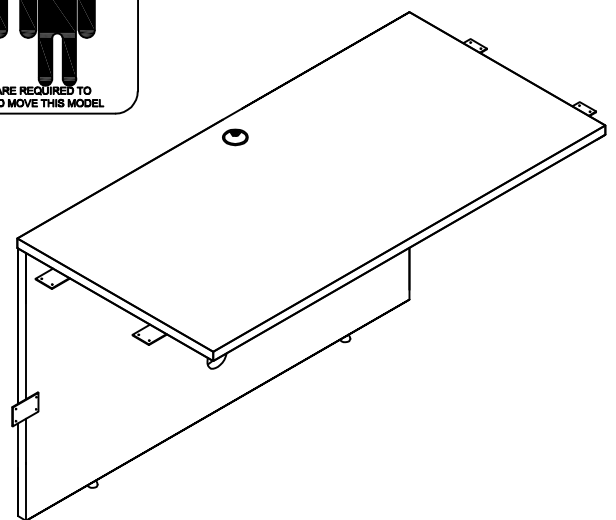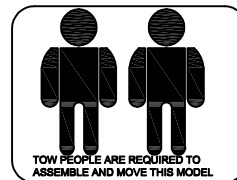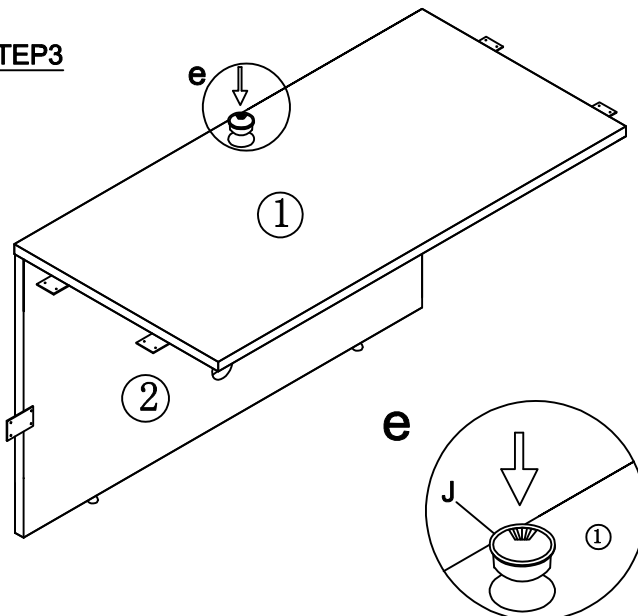

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bossschair.com