


Assembly Instructions

MODEL NO.:N139/N140/N144


HUTCH WITH DOORS

A  Cam lock 21Pcs+1 pcs(spare)	B  Klix Cam 21Pcs+1 pcs(spare)	C  Cam Cover 21Pcs+1 pcs(spare)	D  Dowel 18x1 Pcs	E  Center door hinge 4pcs	F  Side Door Hinge 4pcs	G  JCBC Black Grommet 2+1 pcs	H  Screw #4 3/8" 32Pcs+1Pcs(spare)	I  Screw #4 back board 9pcs+1pcs(spare)	J  36mm Grommet 1pcs	TUX010CL	TUX011KL	TUN026	TUN022DH	TUN023DH	TUN017SC	TUN018SC	TUN018SC	
---	---	--	---	--	--	--	---	---	---	-----------------	-----------------	---------------	-----------------	-----------------	-----------------	-----------------	-----------------	--

STEP1

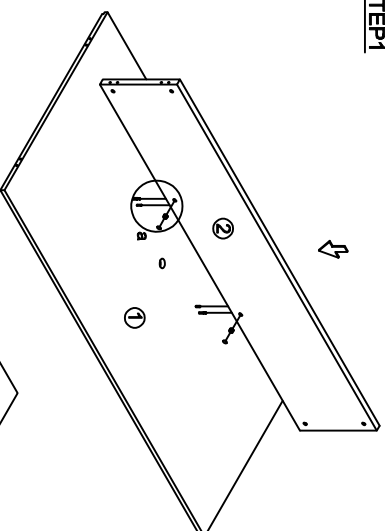

a

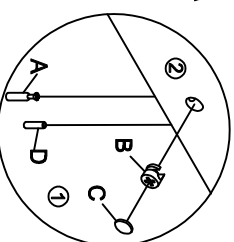


IMPORTANT:

FUNCTION OF KLIJ CAM




MAKE SURE THE ARROW IS
POINTING UPWARDS BEFORE
INSERTING INTO THE PANEL'S
HOLE

STEP3

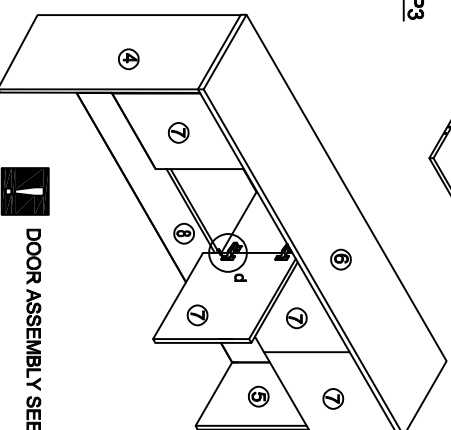


d

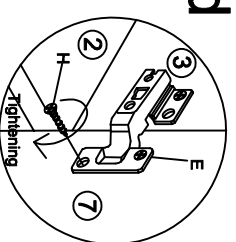


DOOR ASSEMBLY SEE PAGE THREE


STEP2

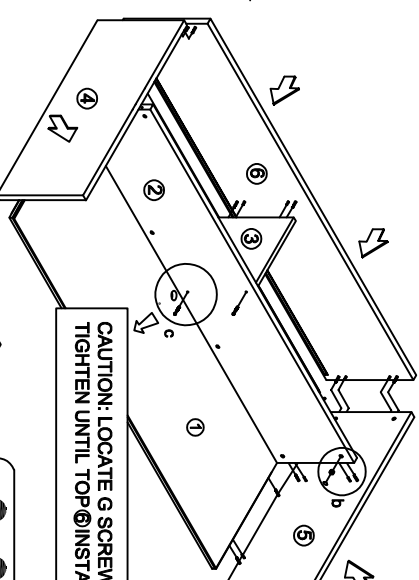

b

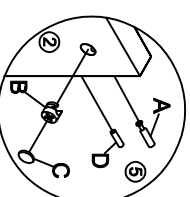


c

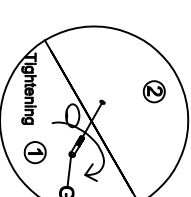


CAUTION: LOCATE G SCREW DO NOT
TIGHTEN UNTIL TOP 6 IS INSTALLED

STEP4

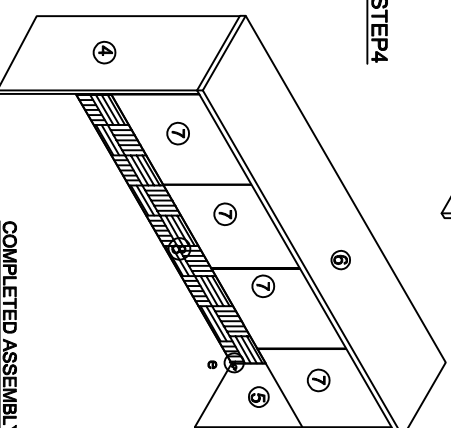

e

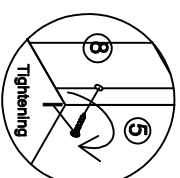

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com